



## mounting instructions sway bar PP200-002 (previous PP-0990).

Please notice that this sway bar is only interchangeable with following OEM number:

- **VAG - 867 411 309 A**

Suitable for transmission types:

- **084 (4-gear)**
- **085 (5-gear)**

Suitable for car models:


- **Audi 50 ('75 - '78)**
- **VW Polo 1 ('75 - '81)**
- **VW Polo 2 ('82 - '90)**
- **VW Polo 2f ('91 - '94)**

Please also follow the specific mounting instructions for your car to prevent any damage.

It may be necessary to adjust the suspension setting after changing your sway bar.



## mounting instructions sway bar PP200-002 (previous PP-0990).

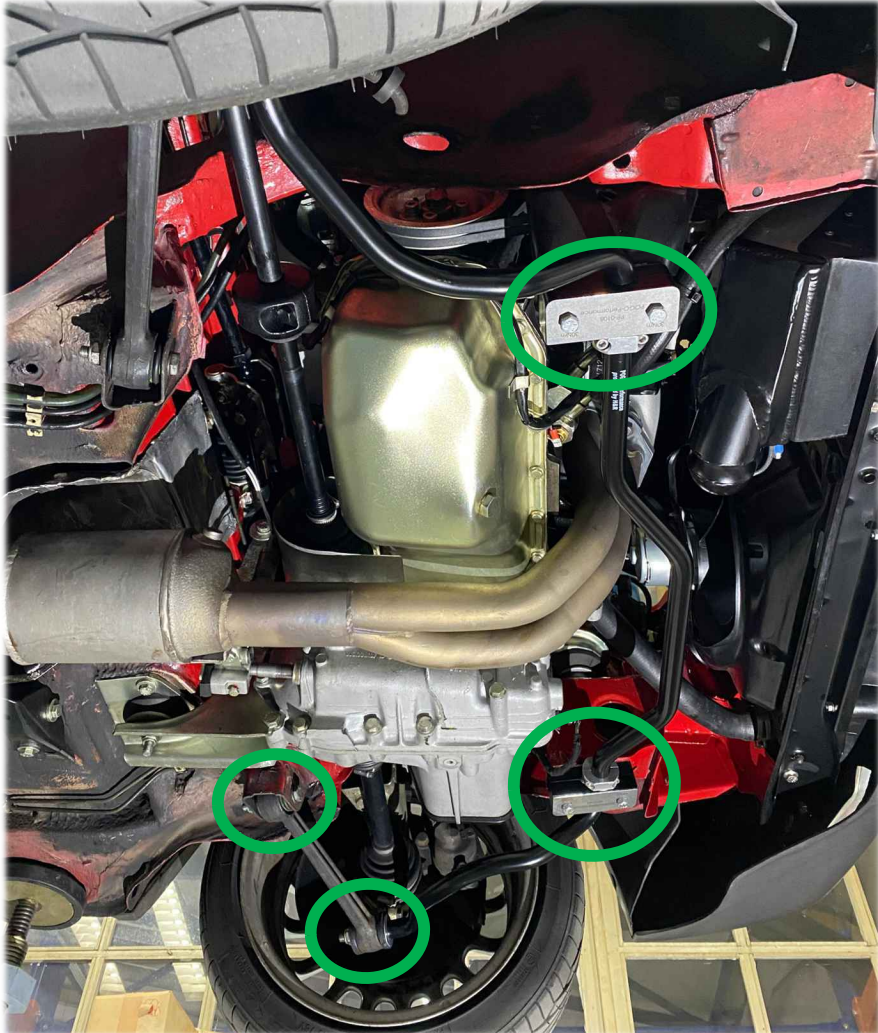

Use only POGO-Performance front mounts with part number PP200-003 (previous PP-0108)

For suspension arms use either POGO-Performance part number PP200-004, or OEM bearings:

- 861 407 183 / 861 407 183 A
- 871 407 151 A / 823 407 181 / 861 407 181

Additional parts:


- 2 x OEM self locking nut: N 022 141 4 (M12x1,5)
- 4 x OEM washer: 861 411 331
- In general, we recommend to use silicone grease to extend lifetime of our bearings



## mounting instructions sway bar PP200-002 (previous PP-0990).



**Optimized design for more space between sway bar and downpipe.**

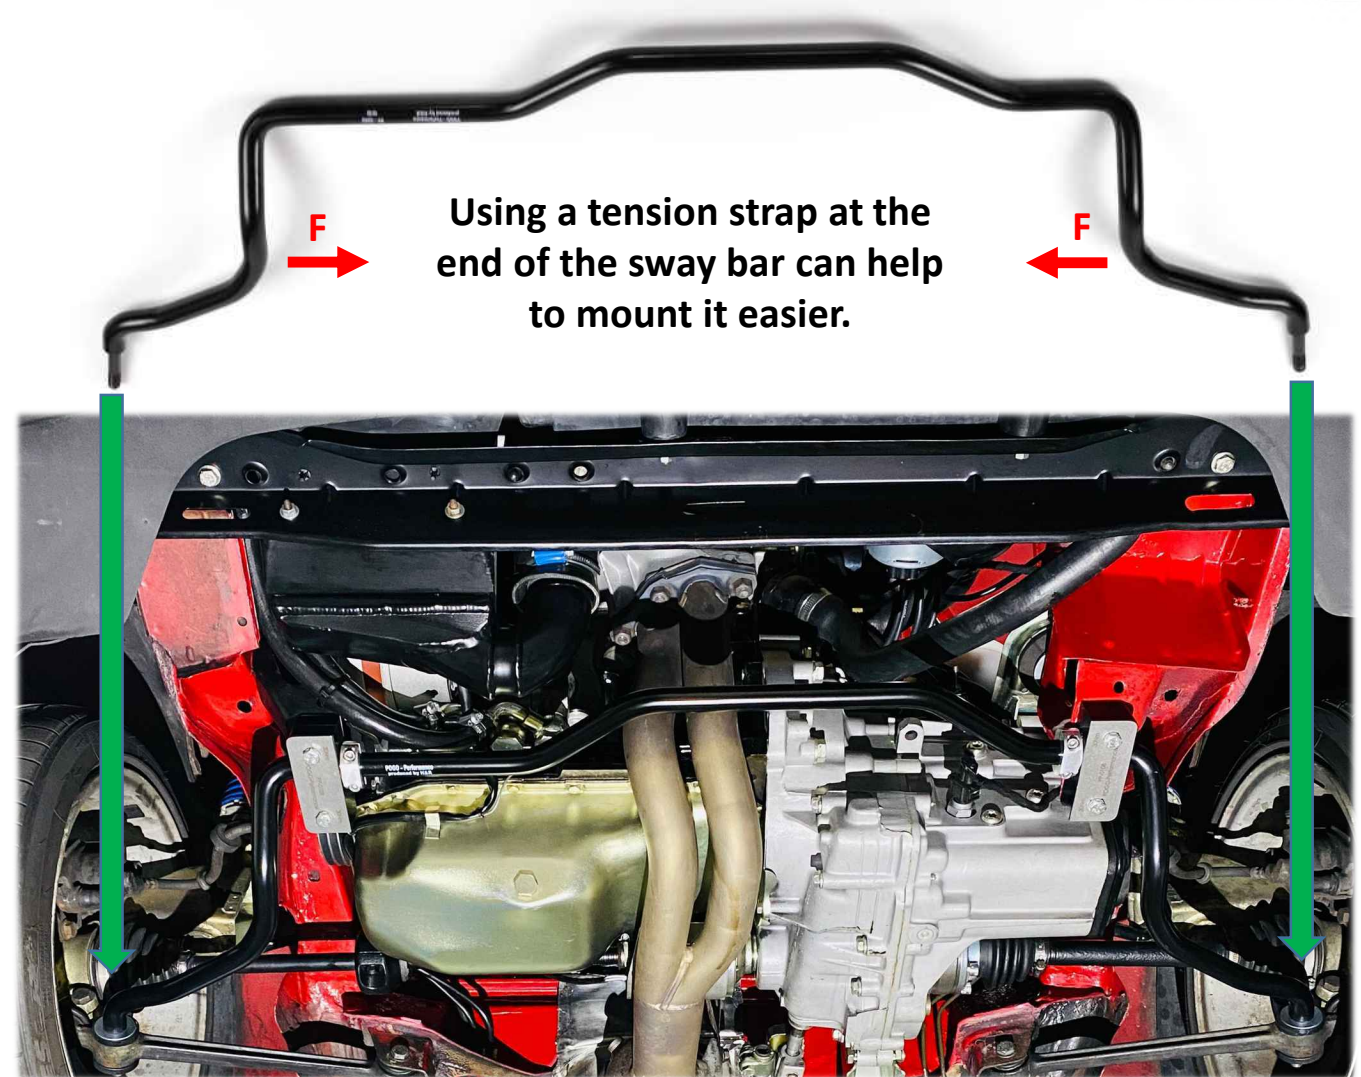





## mounting instructions sway bar PP200-002 (previous PP-0990).




**OEM nut N 022 141 4 (M12x1,5)  
tighten with torque: 75 Nm  
If OE-washers are used, they must  
be mounted with convex surface  
towards the bearings.**

**Place the synthetic shim  
between split ring and  
front mount.**

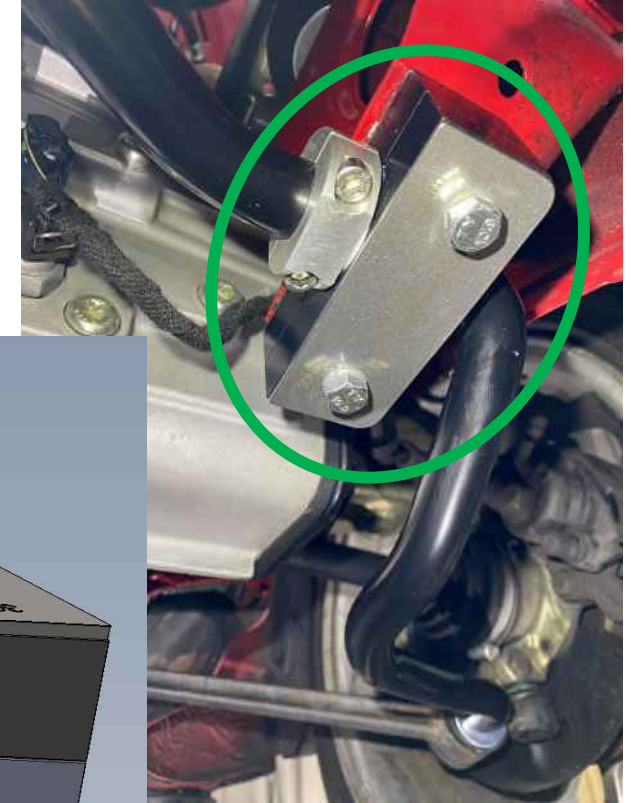
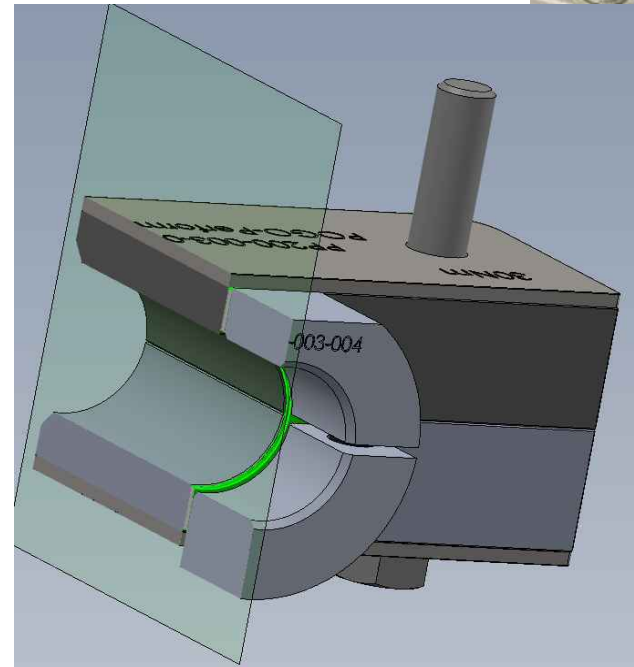




## mounting instructions sway bar PP200-002 (previous PP-0990).

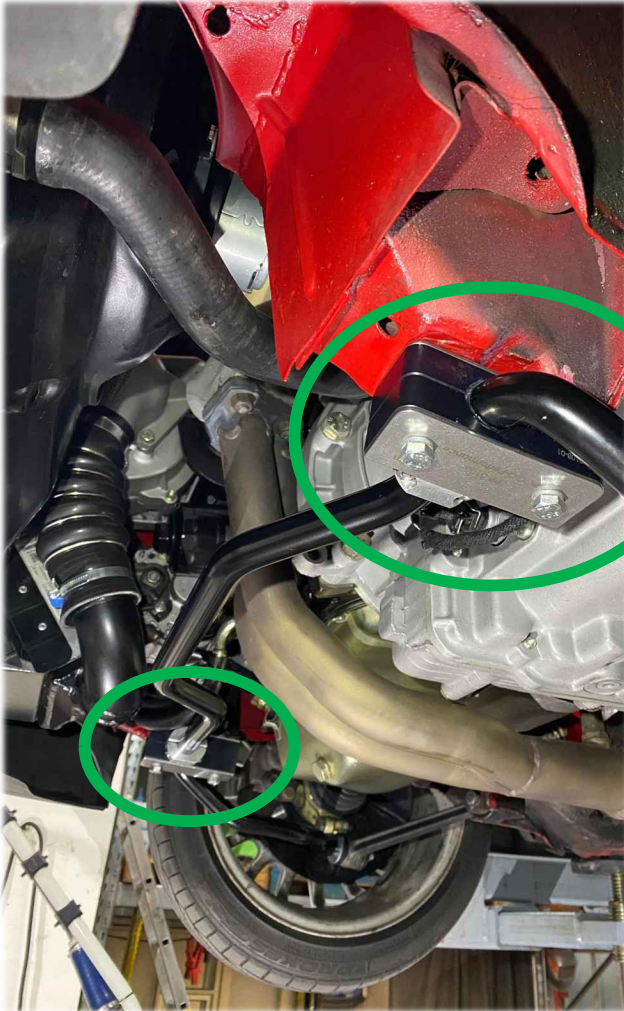

The printing must be  
readable from  
underneath the car.

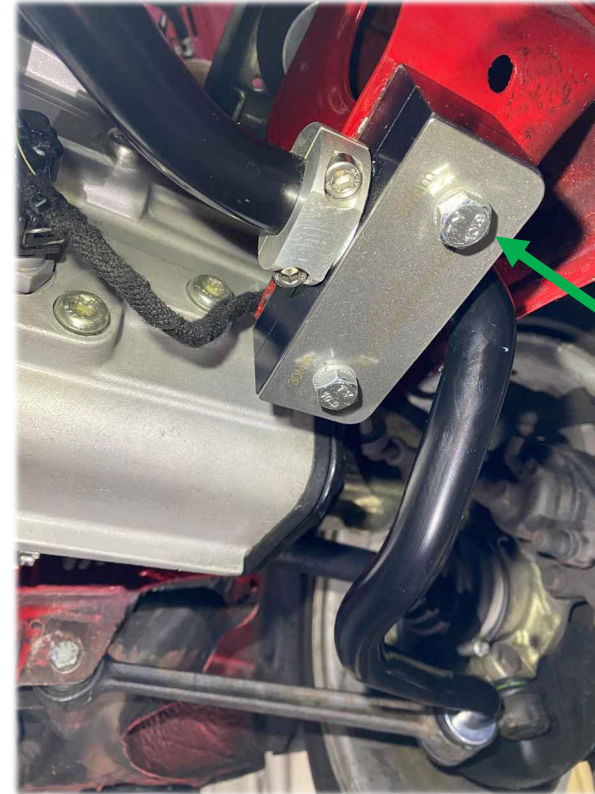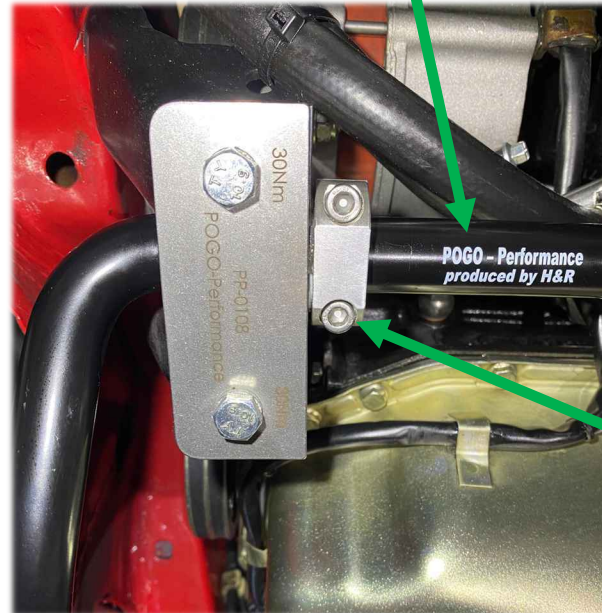

torque: 30 Nm

torque: 5 Nm

Additional we recommend the usage of screw glue.



## Montagehinweise zum Stabilisator PP200-002 (vormals PP-0990).



Bitte beachten Sie, dass dieser Stabilisator lediglich mit der folgenden OEM Teilenummer austauschbar ist:

- **VAG - 867 411 309 A**

Passend für folgende Getriebetypen:

- **084 (4-gear)**
- **085 (5-gear)**

Passend für folgende Fahrzeugmodelle:


- **Audi 50 ('75 - '78)**
- **VW Polo 1 ('75 - '81)**
- **VW Polo 2 ('82 - '90)**
- **VW Polo 2f ('91 - '94)**

Bitte beachten Sie darüber hinaus die fahrzeugspezifischen Montageanweisungen um Schäden vermeiden zu können.

Es kann erforderlich sein, dass die Fahrwerksgeometrie nach dem Tausch des Stabilisators neu justiert werden muss.



## Montagehinweise zum Stabilisator PP200-002 (vormals PP-0990).

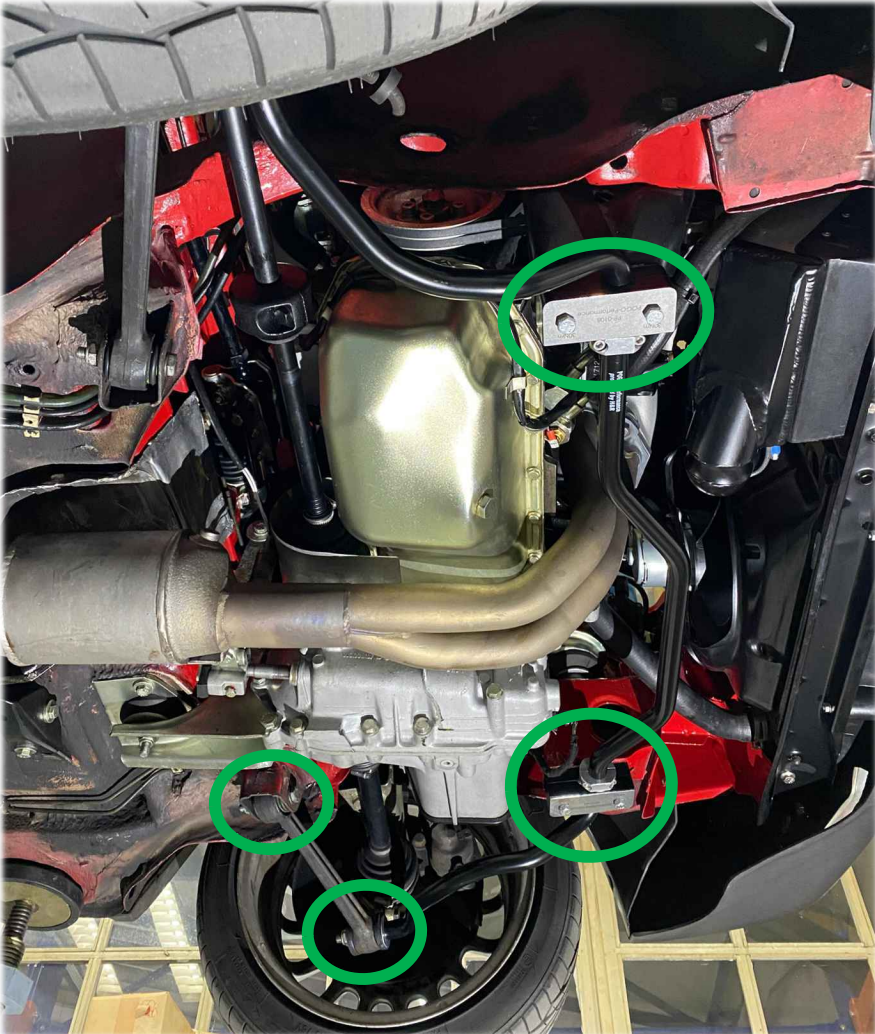

Verwenden sie ausschließlich vordere Stabilisator-Lager von POGO-Performance mit der Teilenummer PP200-003 (vormals PP-0108)

Zur Lagerung der Querlenker verwenden Sie entweder POGO-Performance Teilenummer PP200-004, oder OEM Lager:

- 861 407 183 / 861 407 183 A
- 871 407 151 A / 823 407 181 / 861 407 181

Zusätzliche Montageteile:

- 2 x OEM Selbstsichernde Mutter: N 022 141 4 (M12x1,5)
- 4 x OEM Unterlegscheibe: 861 411 331
- Wir empfehlen Silikon-Fett zur dauerhaften Schmierung der Lagerstellen.



## Montagehinweise zum Stabilisator PP200-002 (vormals PP-0990).



Eine optimierte Kontur ermöglicht mehr Abstand zwischen Stabilisator und Hosenrohr.





## Montagehinweise zum Stabilisator PP200-002 (vormals PP-0990).





**OEM Mutter N 022 141 4 (M12x1,5)**

**Anzugsdrehmoment: 75 Nm**


**Bei Benutzung der OEM Unterlegscheiben,  
müssen diese mit der konvexen Seite  
Richtung Querlenker angelegt werden.**

**Zwischen Klemmring und  
Lagerstelle ist die  
Kunststoffscheibe zu  
montieren.**

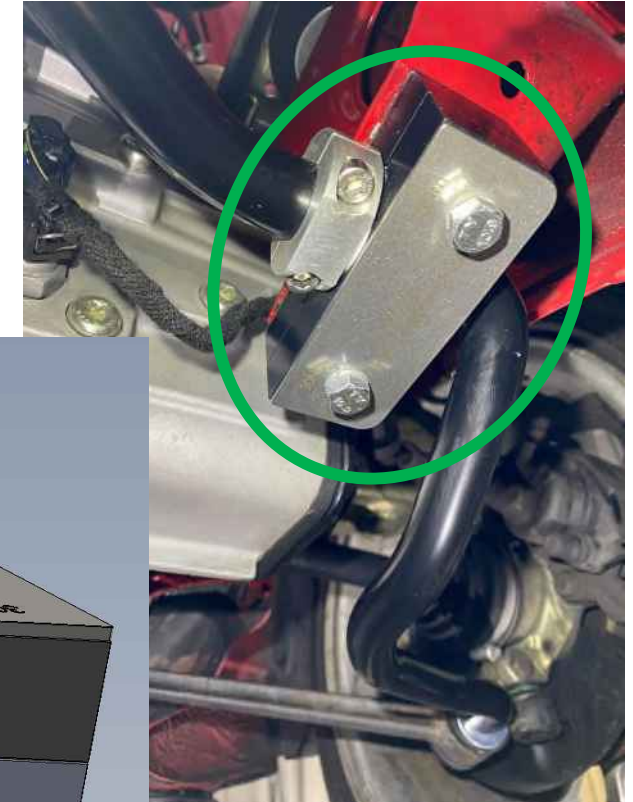
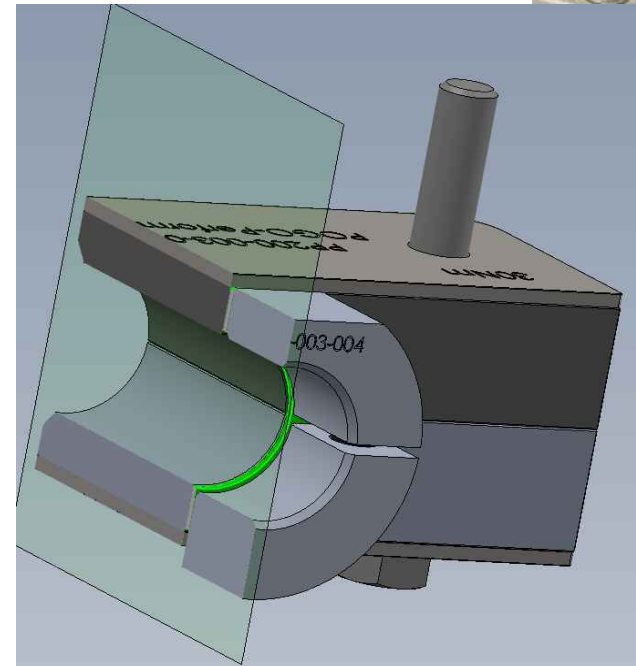




## Montagehinweise zum Stabilisator PP200-002 (vormals PP-0990).

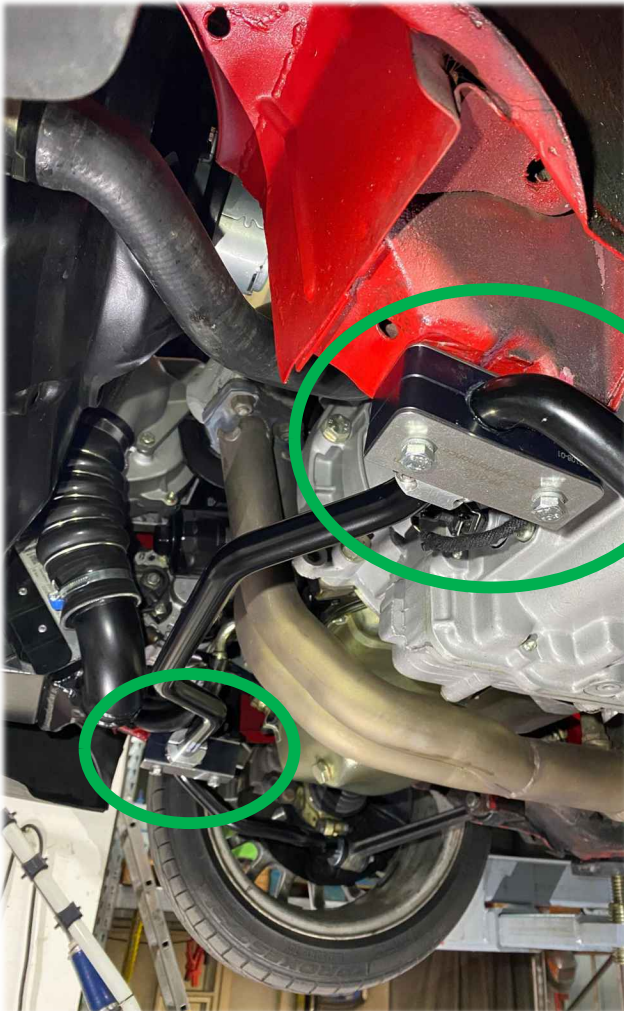

Die Beschriftung  
muss von der  
Fahrzeugunterseite  
lesbar sein.

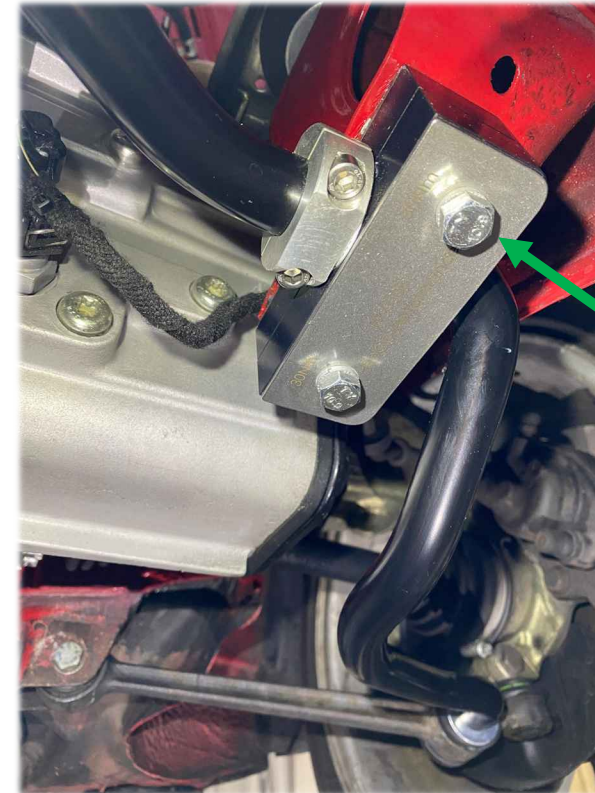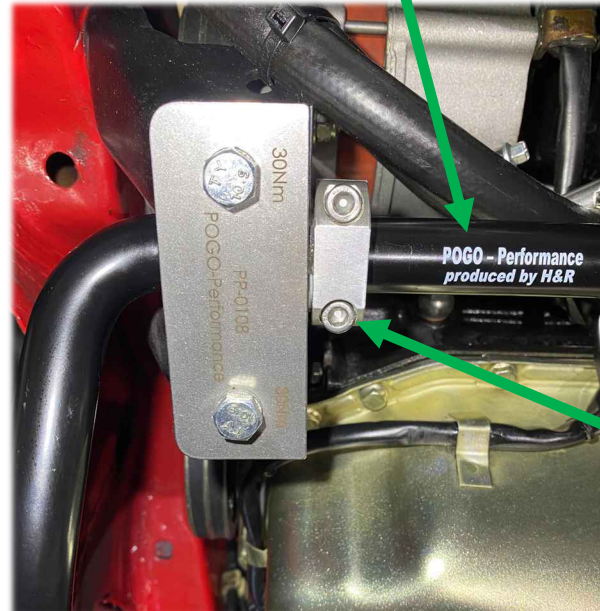

Anzugsdreh-  
moment: 30 Nm

Anzugsdrehmoment: 5 Nm  
Darüber hinaus empfehlen wir  
den Einsatz von Schraubenkleber